


COPPER, STAINLESS STEEL AND BRONZE VESSEL INSTALLATION

Most standard drain assemblies without overflows will work with our metal sinks. We also include a chrome collar that may be needed to ensure a watertight seal at the drain. The collar is simply placed between the rubber gasket and the washer (see diagram below).

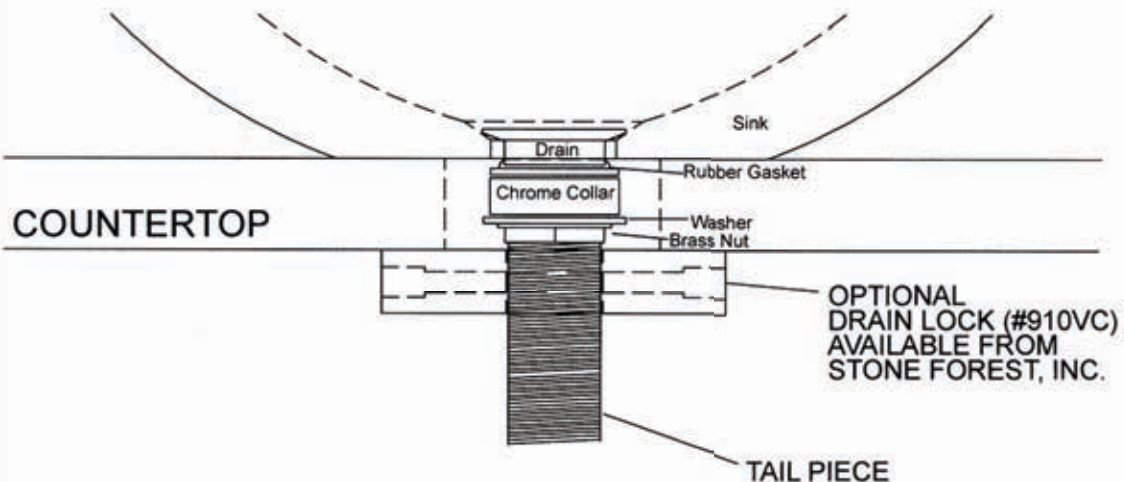

Required drain use 9054D Grid Drain or 9058D Lift and Turn Drain. This can be supplied by Stone Forest at your request in select finishes.

Do not use pop-up drains.

Fasten drain to vessel per drain instructions. Sta Put Ultra, DAP Qwik Seal, or Henkels PolySeam Seal can be used between the drain bevel and drain. Do not use oil based plumber's putty.

A 3" hole in the counter material is needed.

Secure the vessel to the countertop using a bead of construction adhesive.

An optional drain lock is available from Stone Forest. This collar can be fastened to the drain pipe and used to anchor the vessel to the counter material using the drain.